



Document Camera Controls (DC260)



Name	Function	Operation
	Turn on and off the visual presenter.	Remote control / Control panel
	Move up, down, left or right to select the needed function.	Remote control / Control panel
AF	Automatically adjust focal length on an object.	Remote control / Camera Head
Auto Tune	Automatically adjust the image to have the best brightness and focusing performance.	Remote control / Control panel
BRT+/-	Manually adjust the brightness of the image.	Remote control
Capture	Capture the image to the SD card (priority) or internal memory.	Remote control / Control panel
Delete	Delete the image stored in the SD card (priority) or internal memory.	Remote control / Control panel
Enter	Enter/Activate functions.	Remote control / Control panel
Focus +/-	Manually adjust focal length on an object.	Remote control / Control panel
Freeze	Freeze the current image to temporarily stay on the screen. Press again to defreeze.	Remote control / Control panel
Half Page	Turn on/turn off the Half Page function. Pressing [Half Page] once will display the upper half of the live image, while pressing [Half Page] twice will show the lower half of the live image. Press [Half Page] again to exit this function.	Remote control / Control panel

Lamp	Turn on / off the lamp.	Remote control / Control panel
M Scope	Enter the microscope mode. Press again to return to the previous mode.	Remote control
Menu	Activate the setting menu function/exit menu.	Remote control / Control panel
Mode	Select general/slide/negative/microscope mode.	Remote control
PBP	PBP (Picture by picture): Compare live images with captured image files.	Remote control
Photo/ Text	Select photo, text or grayscale image mode. Refer to DC260 User Manual Chapter 7 Descriptions of major functions 7.2 I would like to make text clearer and photos more colorful	Remote control
Record	Record motion images. Press [Record] to record images to SD card (priority) or internal memory; press[Record]again to stop recording.	Remote control / Control panel
Rotate	Rotate the image by 0°/90°/180°/270°.	Remote control / Control panel
Slide Show	Show the photos or videos stored in the SD card (priority) or internal memory in slide mode.	Remote control
Source	Switch between different sources of signals: 1. Live images (default) 2. SD card (priority) or internal memory 3. Computer	Remote control / Control panel
Zoom +/-	Increase or decrease the image size.	Remote control / Control panel