

Document Camera Menu Options

<Remark> Press [Menu] on the remote control or control panel to enter the setting menu; The bold underlined values in the following table are the defaults.

1 st Level Major Items	2 nd Level Minor Items	3 rd Level Adjustment values	Descriptions
Display	Brightness	0~Max	Use the left and right arrow keys to adjust the brightness.
	Mode	<u>Normal</u> /Slide/ Film/Microscope	Use the left and right arrow keys to select the image mode.
	Photo/Text	<u>Photo</u> /Text/Gray	Use the left and right arrow keys to select the image mode. Refer to DC260 User Manual Chapter 7 Descriptions of major functions 7.2 I would like to make text clearer and photos more colorful
	PBP	<u>Enter</u>	Press [Enter] to immediately activate photo comparison mode. Refer to DC260 User Manual Chapter 7 Descriptions of major functions 7.15 I would like to compare images
	Night Vision	On/ <u>Off</u>	Use the left and right arrow keys to select. The night vision mode suits with darker environment.
	Digital Zoom	On/ <u>Off</u>	Use the left and right arrow keys to turn digital zoom on/off.

Storage	Slide Show	<u>Enter</u>	Press [Enter] to play the photos or videos stored in the SD card (priority) or internal memory. Refer to DC260 User Manual Chapter 7 Descriptions of major functions 7.14 I would like to play the slides
	Slide Show Effect	<ol style="list-style-type: none"> 1. <u>Off</u> 2. Shutter 3. Right 4. Down 5. Side 6. Open 	Use the left and right arrow keys to select the image switch mode.
	Delay	<ol style="list-style-type: none"> 1. <u>1 Sec</u> 2. 3 Sec 3. 5 Sec 4. 10 Sec 5. Manual 	Use the left and right arrow keys to select the delay time. Select manual mode to switch images manually.
	Copy To SD	<u>Enter</u>	Press [Enter] to immediately copy the data in visual presenter to the SD card.
	Delete All	Yes/ <u>No</u>	Use the left and right arrow keys to select, and then press [Enter] to confirm the deletion of photos. Delete the image stored in the SD card (priority) or internal memory.
	Format	Yes/ <u>No</u>	Use the left and right arrow keys to select, and then press [Enter] to format the data stored in the SD card (priority) or internal memory.

	Image Quality	<ol style="list-style-type: none"> 1. High 2. <u>Medium</u> 3. Low 	Use the left and right arrow keys to select the image quality for the captured images and recorded videos.
Setting	Capture	<ol style="list-style-type: none"> 1. <u>Single</u> 2. Continuous 3. Disable 	Use the left and right arrow keys to select the video capture mode. (Single/Continuous/Disable)
	Capture Time	<ol style="list-style-type: none"> 1. <u>1 hr</u> 2. 2 hr 3. 4 hr 4. 8 hr 5. 24 hr 	Use the left and right arrow keys to set the capture time. <Remark> It only works when the capture mode is set to [continuous].
	Capture Interval	<ol style="list-style-type: none"> 1. <u>5 sec</u> 2. 10 sec 3. 30 sec 4. 1 min 5. 2 min 6. 5 min 	Use the left and right arrow keys to set the capture interval. <Remark> It only works when the capture mode is set to [continuous]
	USB Transfer	<ol style="list-style-type: none"> 1. <u>Camera</u> 2. Storage device 	<p>Use the left and right arrow keys to select the USB transfer mode.</p> <p>1.Camera: connecting the DC260 to view live image; 2.Storage device: connecting to the SD card (priority) or internal memory.</p> <p>Refer to DC260 User Manual Chapter 7 Descriptions of major functions 7.20 Computer-related functions</p>

	AE	<u>On</u> /Off	Regardless of outside environment, the machine will adjust the brightness to the optimal condition. Use the left and right arrow keys to select.
	AWB	<u>Enter</u>	Regardless of outside light or color, the machine will adjust the color to the optimal condition. Press [Enter] to activate.
	Digital Zoom	On/ <u>Off</u>	Use the left and right arrow keys to turn digital zoom on/off.
	Noise Reduction	On/ <u>Off</u>	Use the left and right arrow keys to turn on/off the noise reduction function. Refer to <u>DC260 User Manual Chapter 7 Descriptions of major functions 7.17 I would like to reduce the image noise</u>
	Volume	0~Max	Use the left and right arrow keys to adjust the volume.

Advance	Language	<ol style="list-style-type: none"> 1. <u>English</u> 2. 繁体中文 3. Deutsch 4. Français 5. Italiano 6. Español 7. Русский 8. Nederlands 9. Suomi 10. Polski 	<p><u>English</u> Traditional Chinese German French Italian Spanish Russian Dutch Finnish Polish</p> <p>Use the left and right arrow keys in the language option to select the preferred language.</p>
	Output Mode	<ol style="list-style-type: none"> 1. XGA 2. SXGA 3. UXGA 4. 720P 5. 1080P 	<p>Using UXGA - set the DIP switch for XGA, select UXGA for OSD</p> <p>Using 1080P - set the DIP switch as 720P, select 1080p for OSD</p> <p>Based on different DIP switch settings, different output modes are provided. Refer to Chapter 5 DIP “Switch Settings” in the DC260 user manual.</p>
	Lock Down	On/ <u>Off</u>	<p>Use the left and right arrow keys to turn the lock down function on and off. You can set the password when [On] is selected. Refer to DC260 User Manual Chapter 7 Descriptions of major functions 7.18 I would like to set / change the password</p>

	Auto Erase	On/ <u>Off</u>	<p>Use the left and right arrow keys to turn the auto erase function on and off. When [On] is selected, the saved images will automatically be deleted when the system is turned off.</p> <p>Refer to DC260 User Manual Chapter 7 Descriptions of major functions 7.11 I would like to automatically delete the captured images whenever it is turned off</p>
	Preset Load	Yes/ <u>No</u>	<p>Read the value of the current image mode.</p> <p>Use the left and right arrow keys to select, and then press [Enter] to confirm.</p>
	Preset Save	Yes/ <u>No</u>	<p>Save the value of the current image mode.</p> <p>Use the left and right arrow keys to select, and then press [Enter] to confirm.</p>
	Factory Reset	Yes/ <u>No</u>	<p>Use the left and right arrow keys to select, and then immediately press [Enter] to activate the factory reset.</p> <p>Refer to DC260 User Manual Chapter 7 Descriptions of major functions 7.16 I would like to resume the factory default setting</p>